



СХЕМА СБОРКИ Комод «Рауна» 03

/ BELFAN
www.belfan.ru

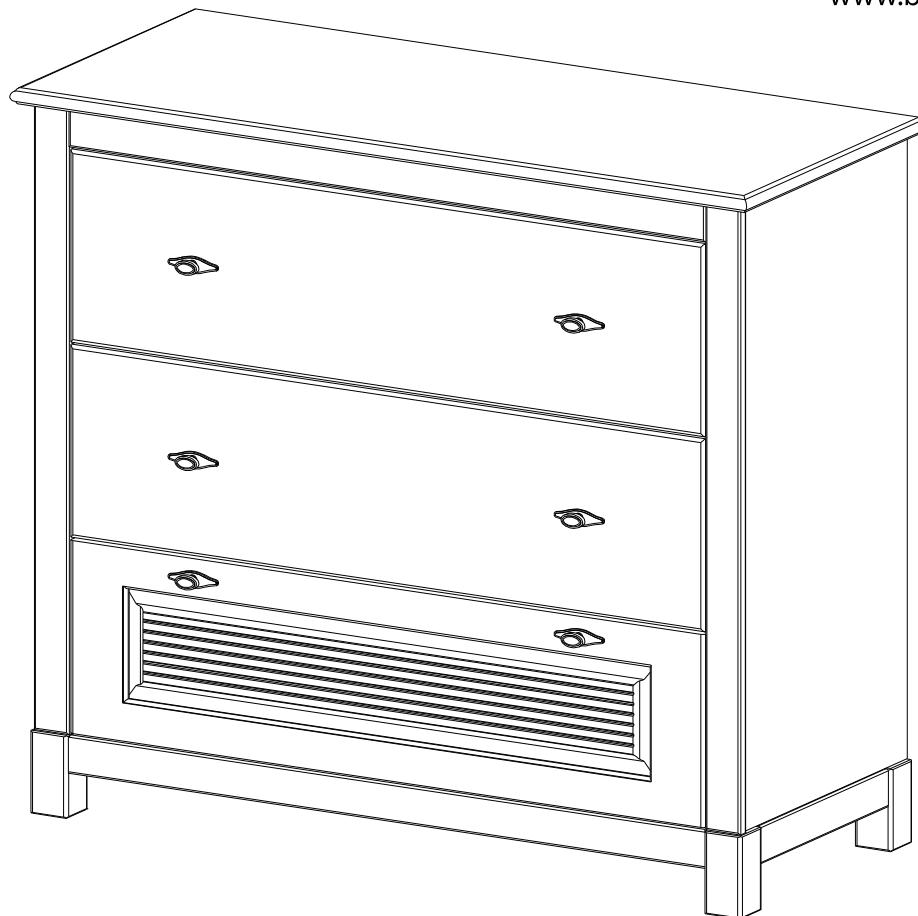


D	Montageanleitung	GB	Assembly instructions
FR	Notice de montage	IT	Istruzioni di montaggio
NL	Handlieding voor de montage	PL	Instrukcja montażu
CZ	Montážní návod	SK	Návod na montáž
HU	Szerelesi útmutató	RO	Instrucțiuni de montaj
TR	Montaj talimatı	RU	Инструкция по монтажу

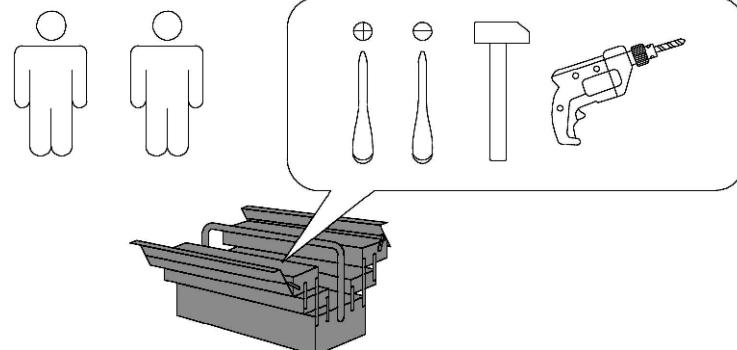


EAC


0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200

x2

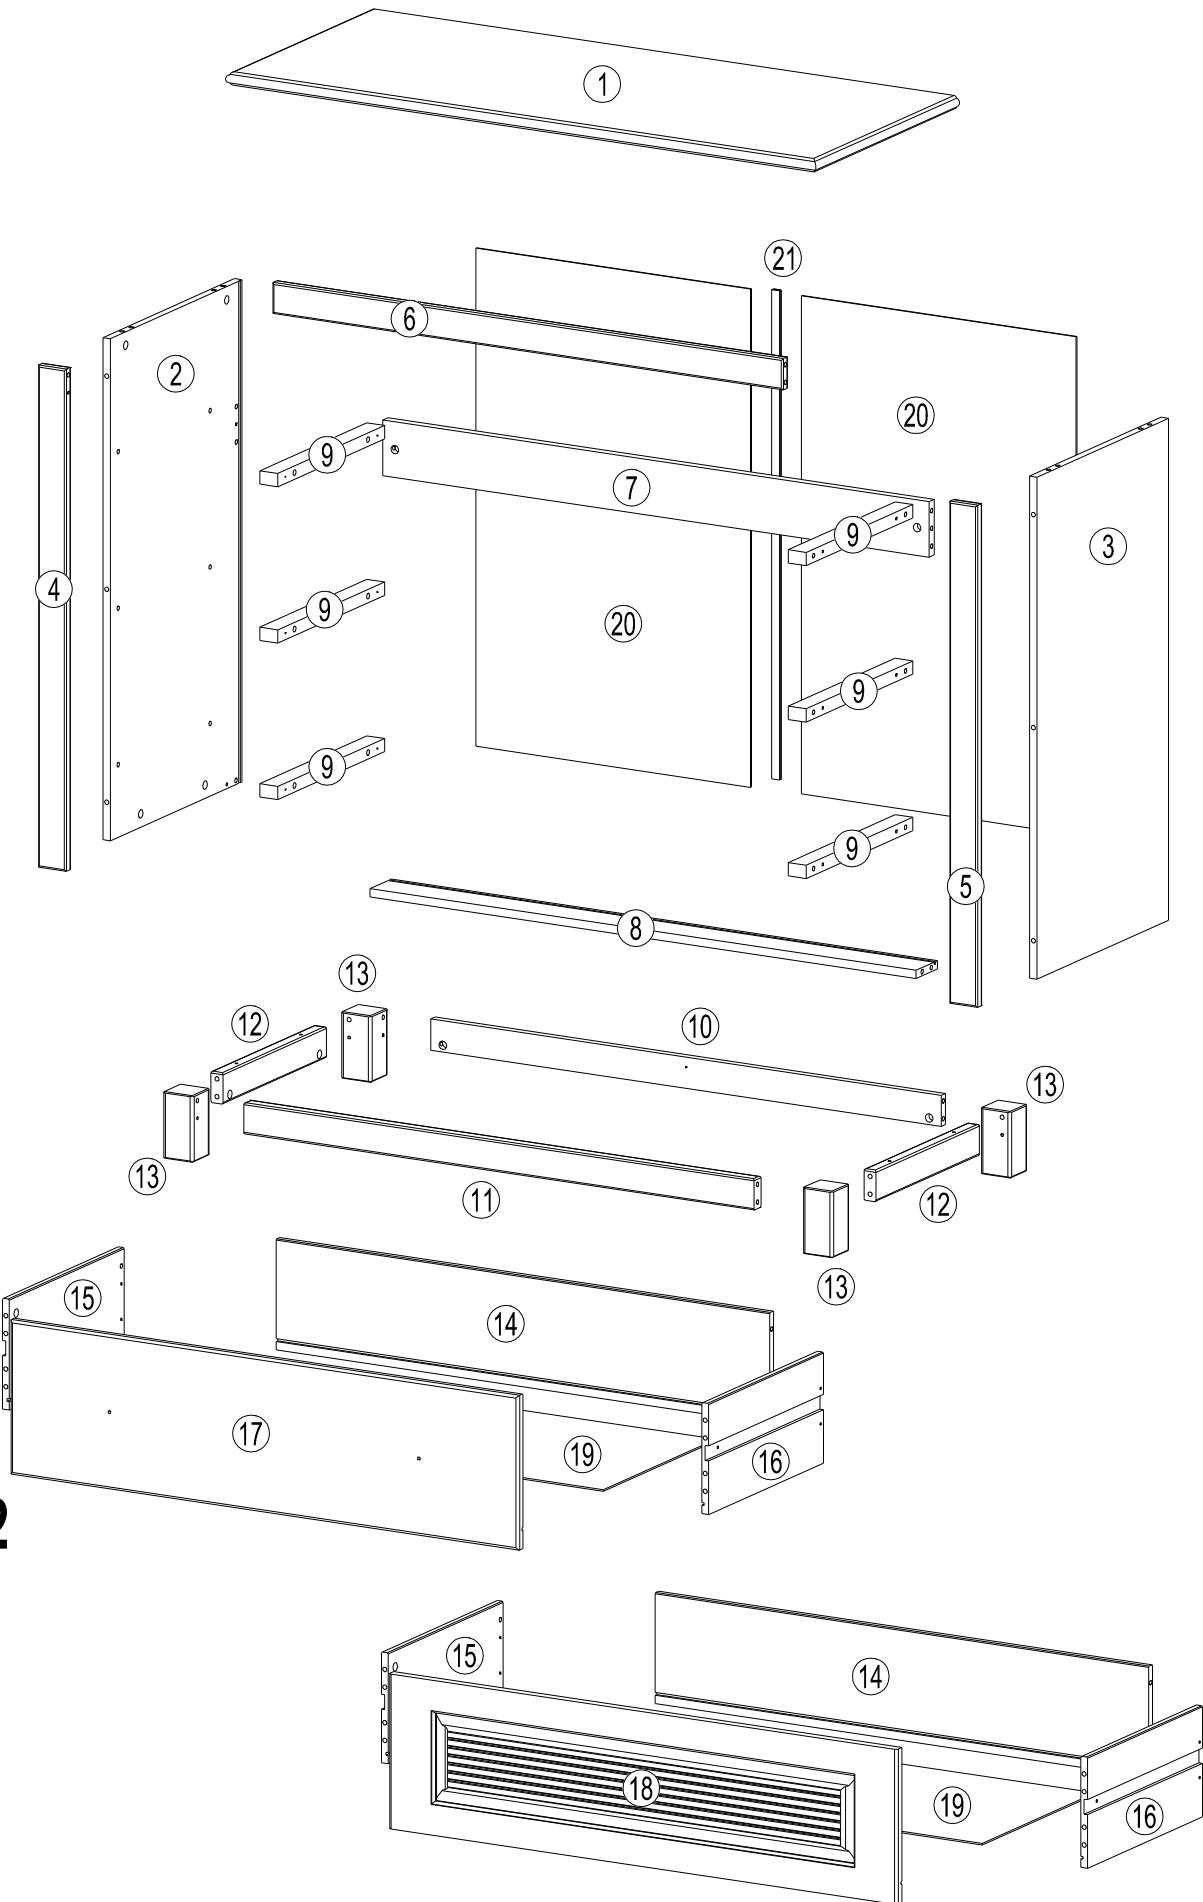


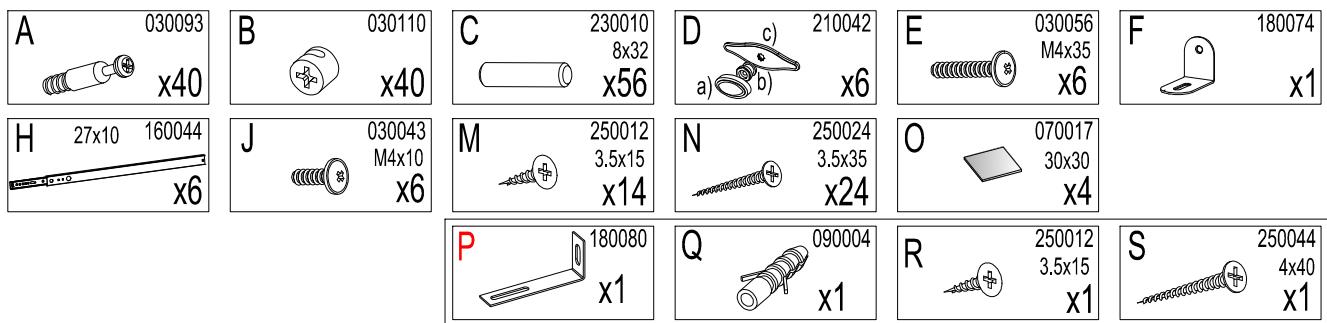

No	Size/MaB (mm)	Qty	✓	No	Size/MaB (mm)	Qty	✓
1	1187x500x24	1		12	360x56x24	2	
2	905x458x15	1		13	120x60x60	4	
3	905x458x15	1		14	992x200x14	3	
4	905x56x18	1		15	400x200x14	3	
5	905x56x18	1		16	400x200x14	3	
6	1026x56x18	1		17	1022x279x18	2	
7	1098x100x18	1		18	1022x279x18	1	
8	1098x74x15	1		19	1001x392x3	3	
9	372x36x24	6		20	898x552x3	2	
10	1026x56x15	1		21	882x17x7	1	
11	1026x56x24	1					


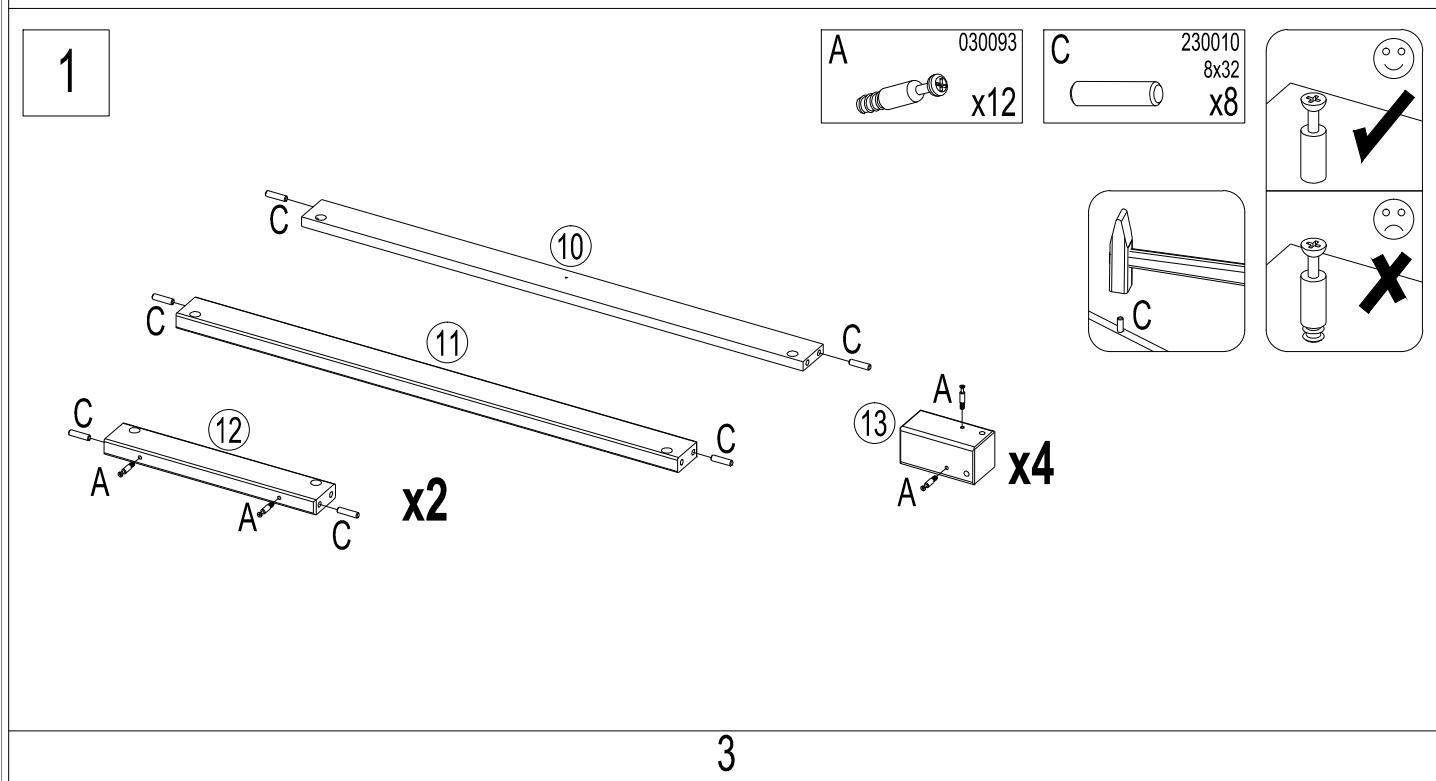


2

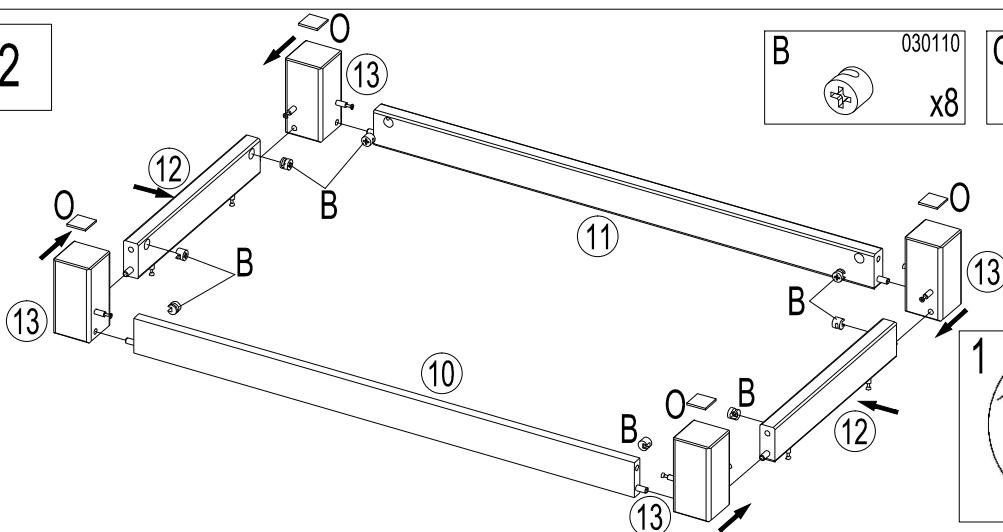


B 030110 x8

0 070017 30x30 x4

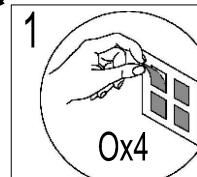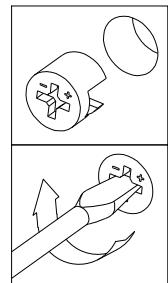


3

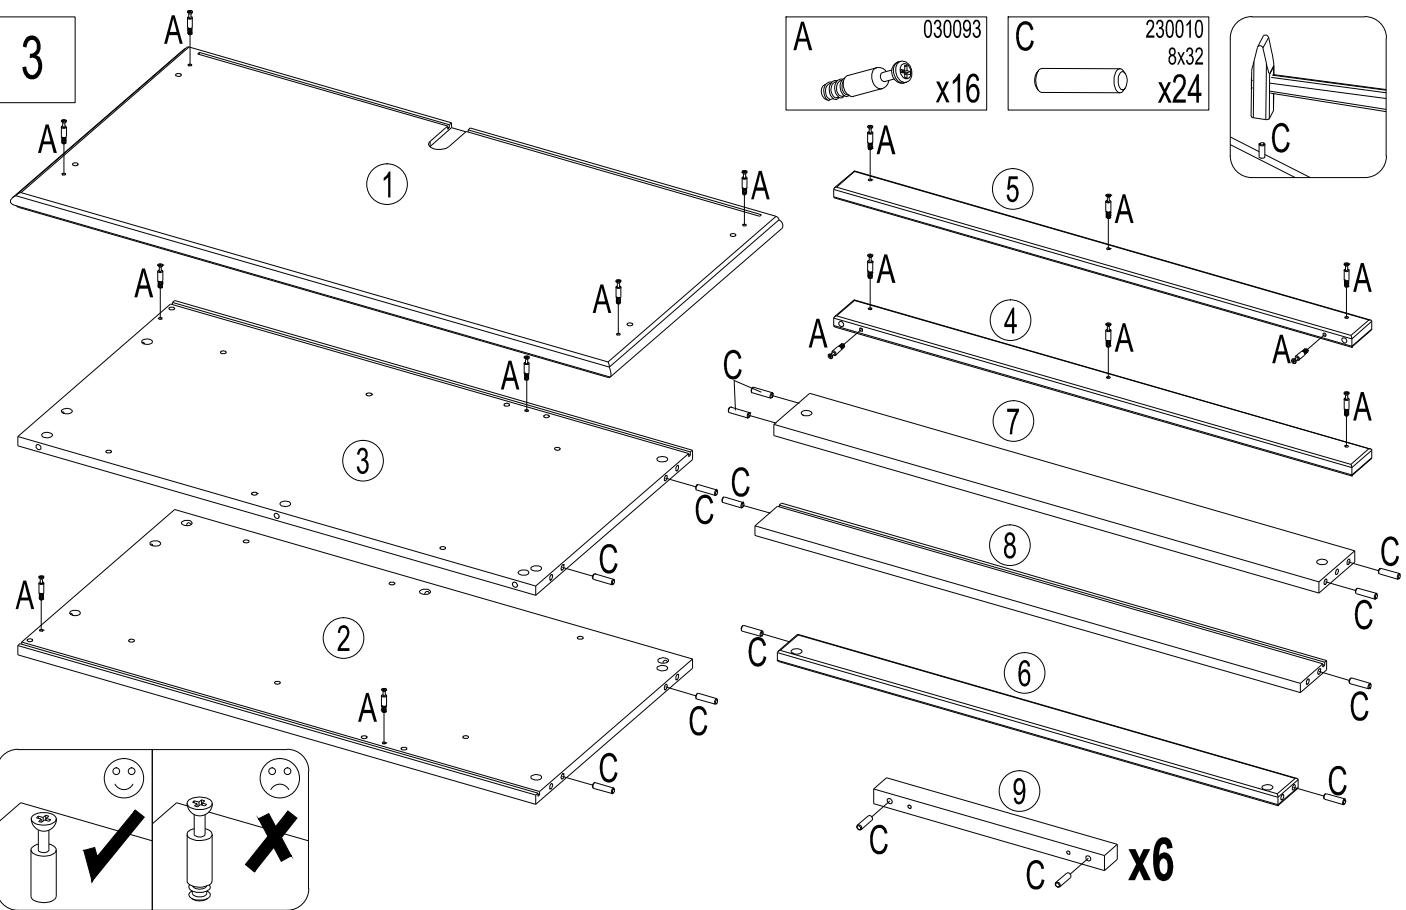


A 030093 x16

C 230010 8x32 x24




4

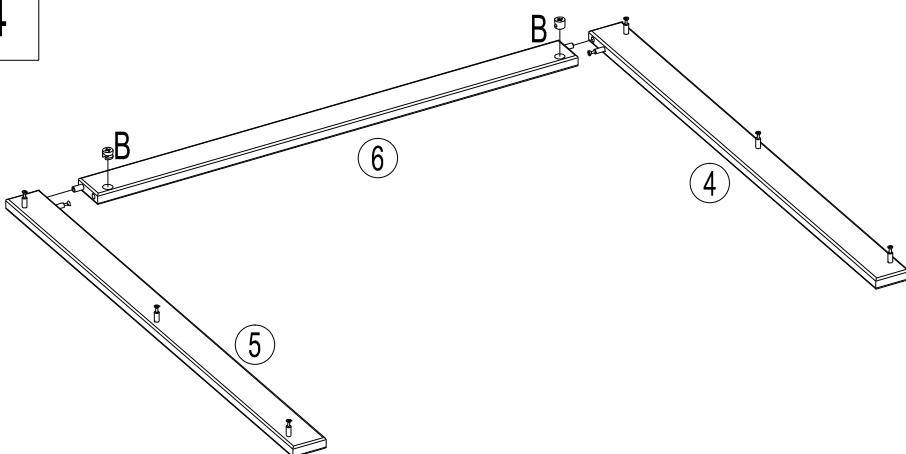



B 030110 x2

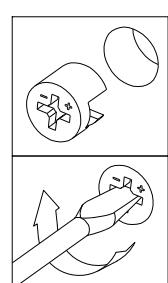




5

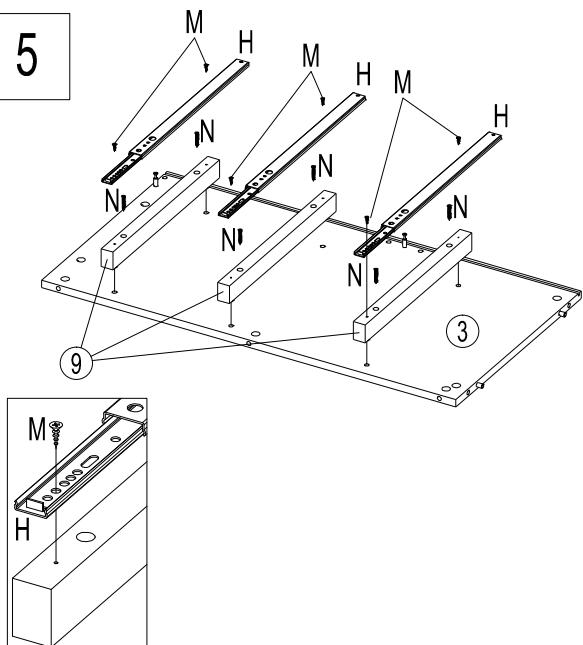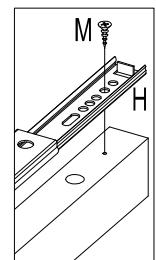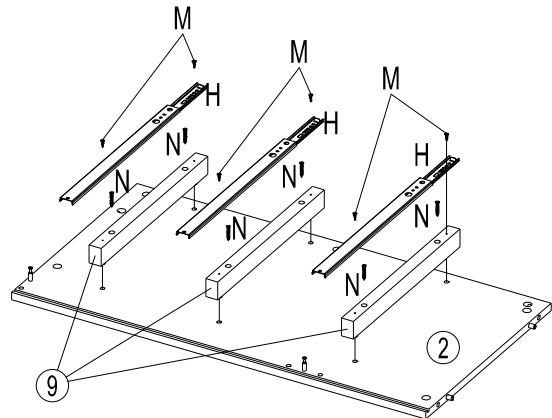H 27x10 160044
x6M 250012
3.5x15
x12N 250024
3.5x35
x12


6

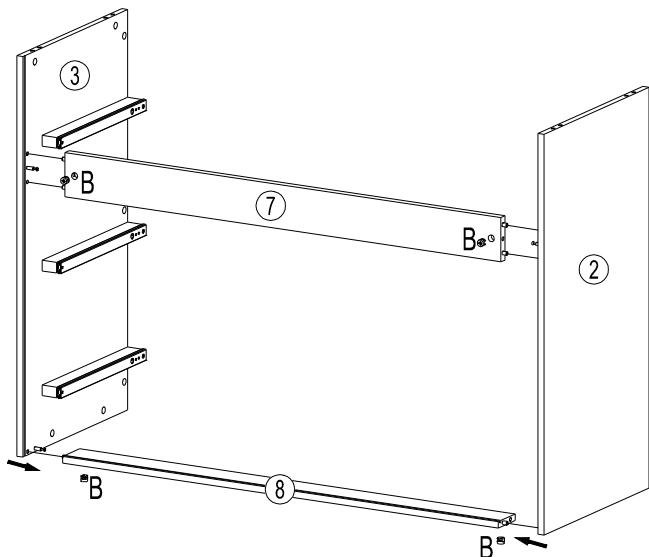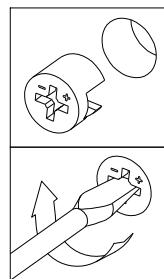B 030110
x4


7

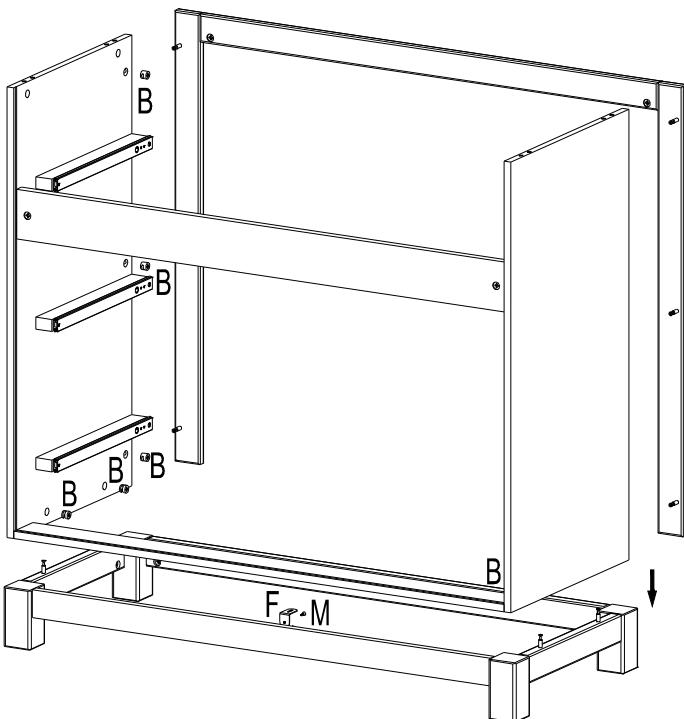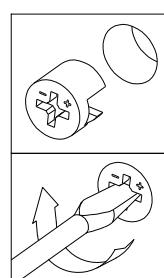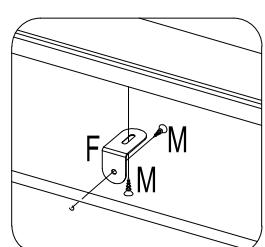B 030110
x10F 180074
x1M 250012
3.5x15
x2


8

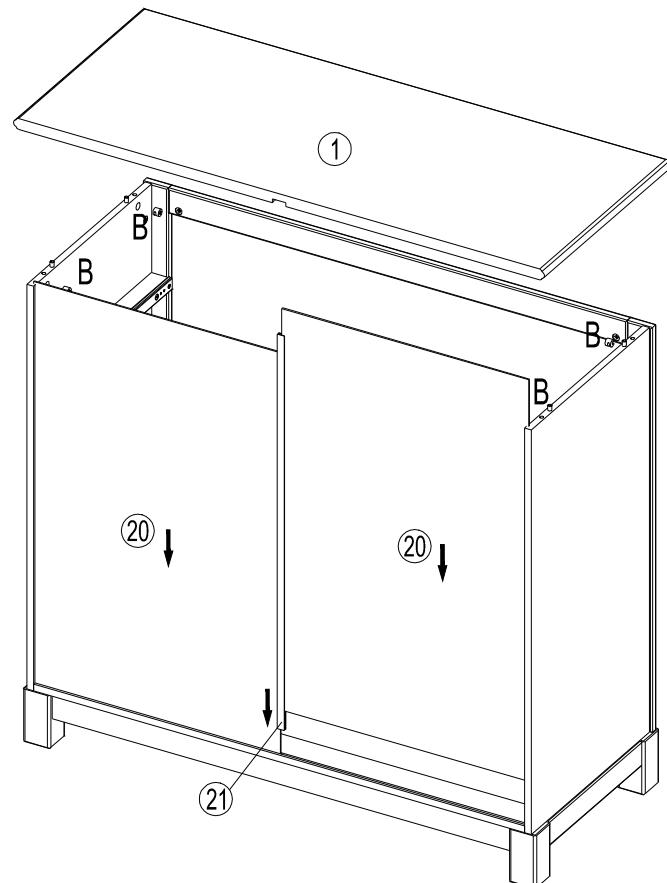

B	030110
x4	

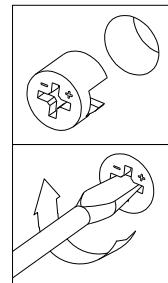

9

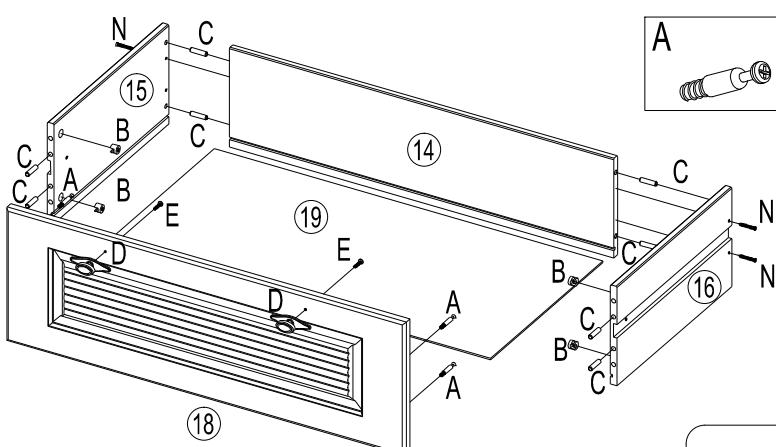

A	030093
x4	

B	030110
x4	

C	230010
8x32	


D	210042
a) b)	x2

E	030056
M4x35	

N	250024
3.5x35	

	x4
--	----

10

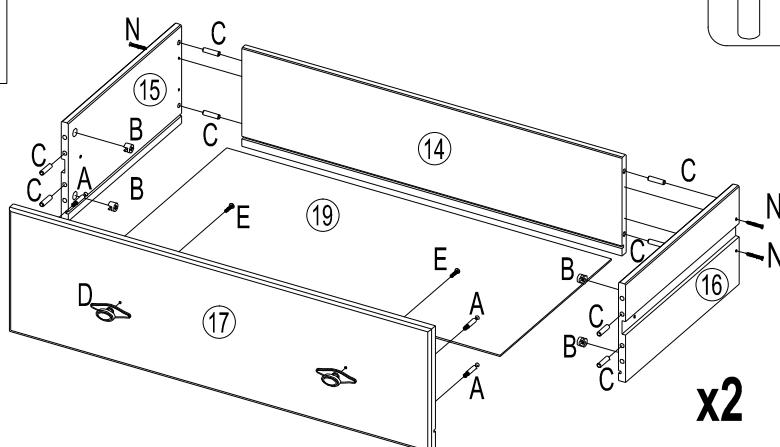

A	030093
x8	

B	030110
x8	

C	230010
8x32	

D	210042
a) b)	x4

E	030056
M4x35	

N	250024
3.5x35	

	x8
--	----

11

J 030043
M4x10
x6

P 180080
x1

Q 090004
x1

R 250012
3.5x15
x1

S 250044
4x40
x1

