

# СХЕМА СБОРКИ Кровать «Рауна»


140Б

160Б

180Б

/ BELFAN

www.belfan.ru

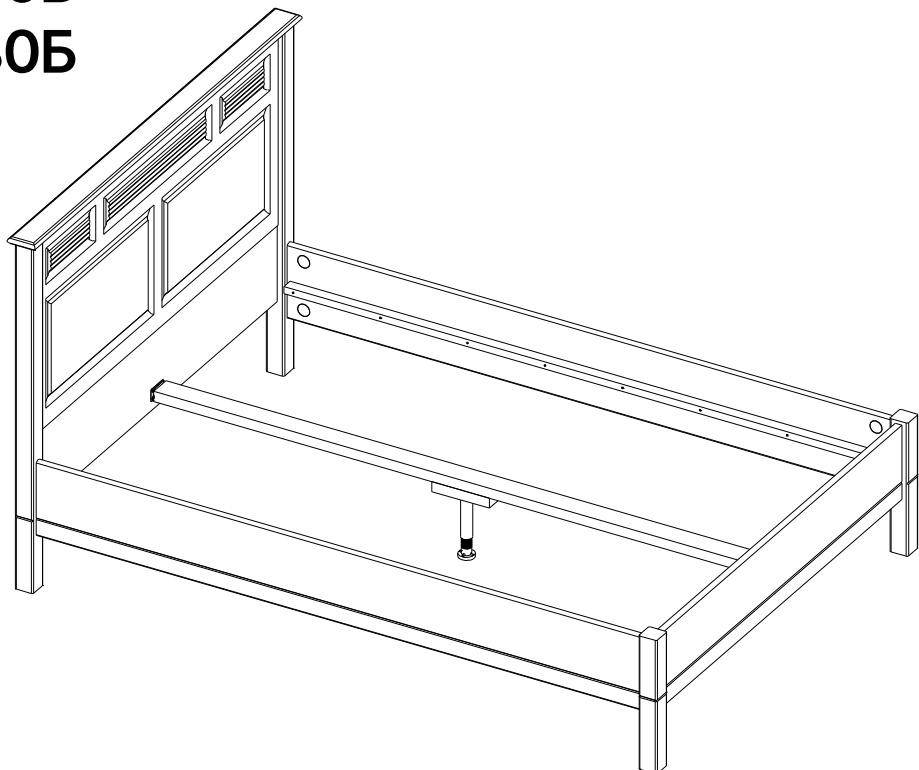

D Montageanleitung

FR Notice de montage

NL Handlieding voor de montage

CZ Montážní návod

HU Szerelesi útmutató

TR Montaj talimatı

GB Assembly instructions




IT Istruzioni di montaggio

PL Instrukcja montażu


SK Návod na montáž

RO Instrucțiuni de montaj

RU Инструкция по монтажу

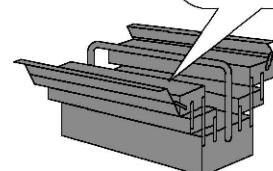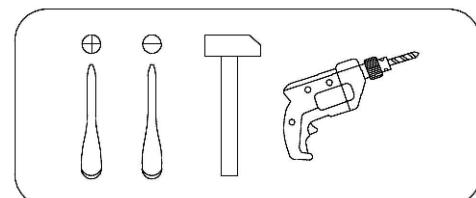
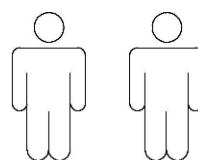


A	030002 Ø8x48 x8	B	030105 Ø35x15 x8	C	230010 8x32 x2	D	230021 10x50 x8
E	x8	F	180087 x2	G	180087 x2	H	250048 4x55 x18
J	110025 SW 6 x1	K	250036 4x17 x16	L	070017 30x30 x4	M	170015 x1

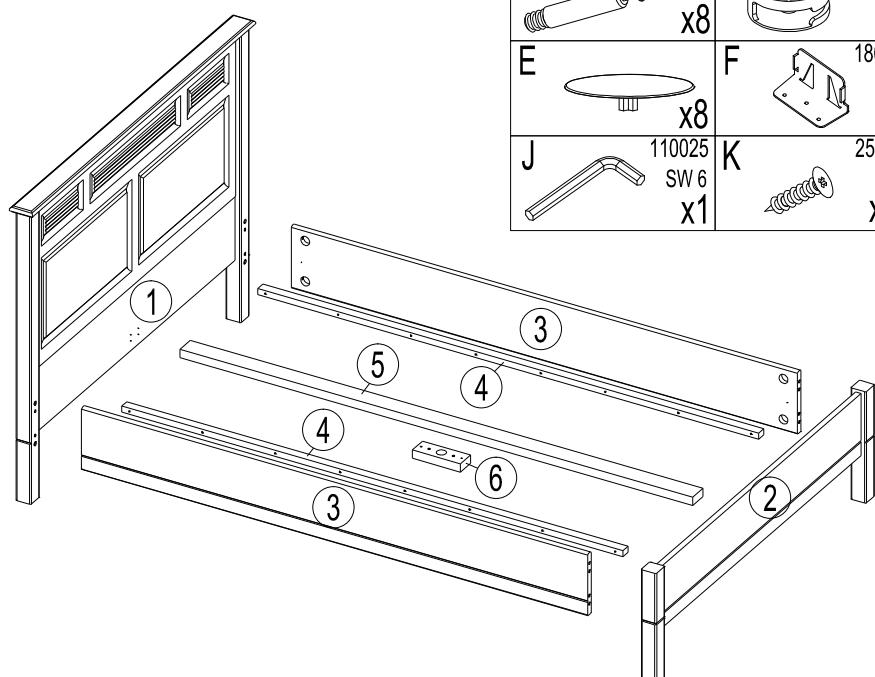





Nº	Size/MaB (mm)	Qty	✓	Nº	Size/MaB (mm)	Qty	✓
1	1528(1728,1928)x 1140x 92	1		4	1980x35x24	2	
2	1496(1696,1896)x 440x 60	1		5	2026x70x33	1	
3	2000x245x24	2		6	190x70x33	1	

1	C	230010 8x32 x2	F	180087 x2	H	250048 4x55 x2	K	250036 4x17 x8	M	170015 x1
---	---	----------------------	---	--------------	---	----------------------	---	----------------------	---	--------------

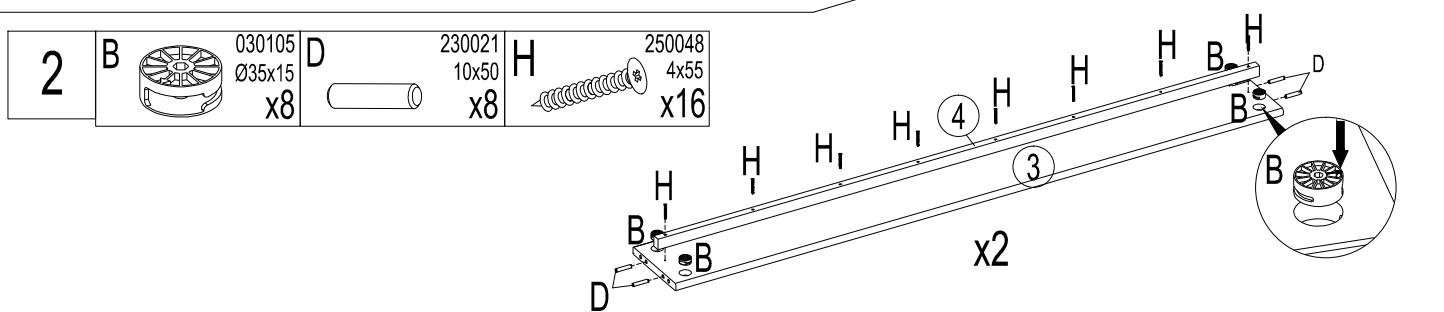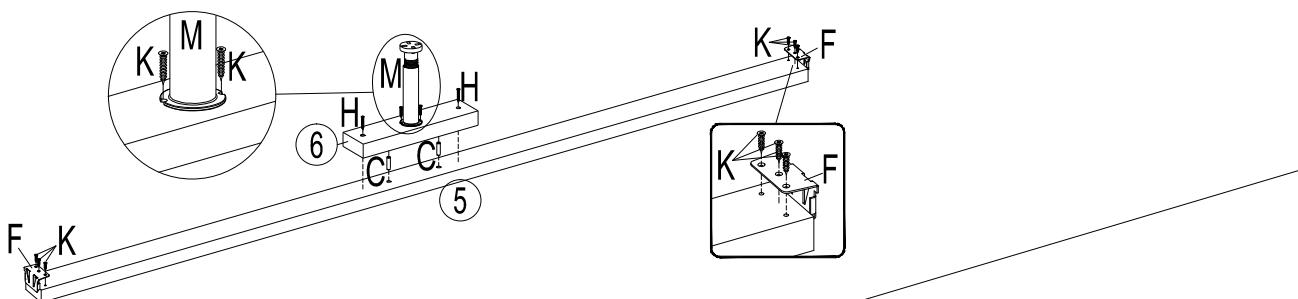

3

A	030002 Ø8x48 x8	G	180087 x2	K	250036 4x17 x8	L	070017 30x30 x4
---	-----------------------	---	--------------	---	----------------------	---	-----------------------

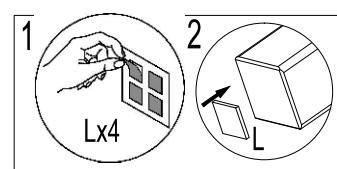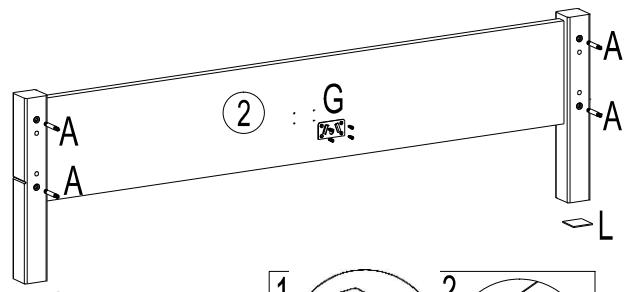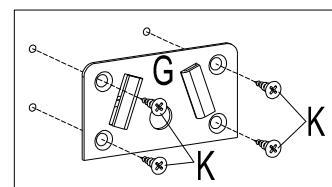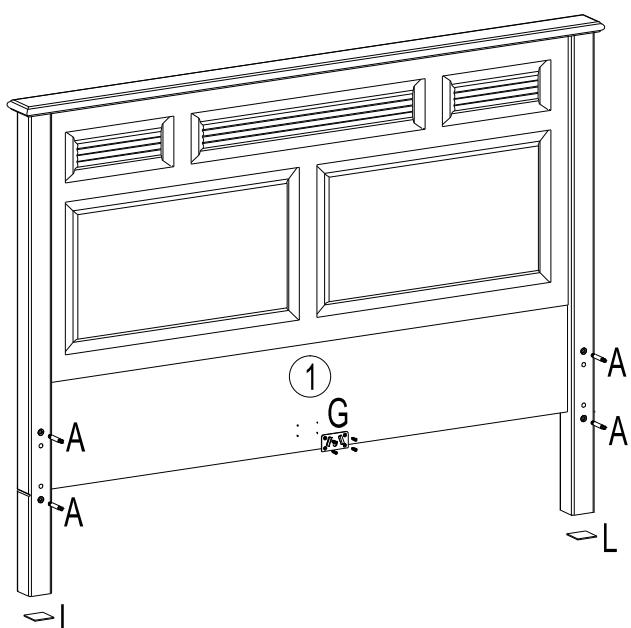

4

E	x8	J	SW 6 x1
---	----	---	------------

