





СХЕМА СБОРКИ Кровать «Ольса-С» 160


/ BELFAN

www.belfan.ru

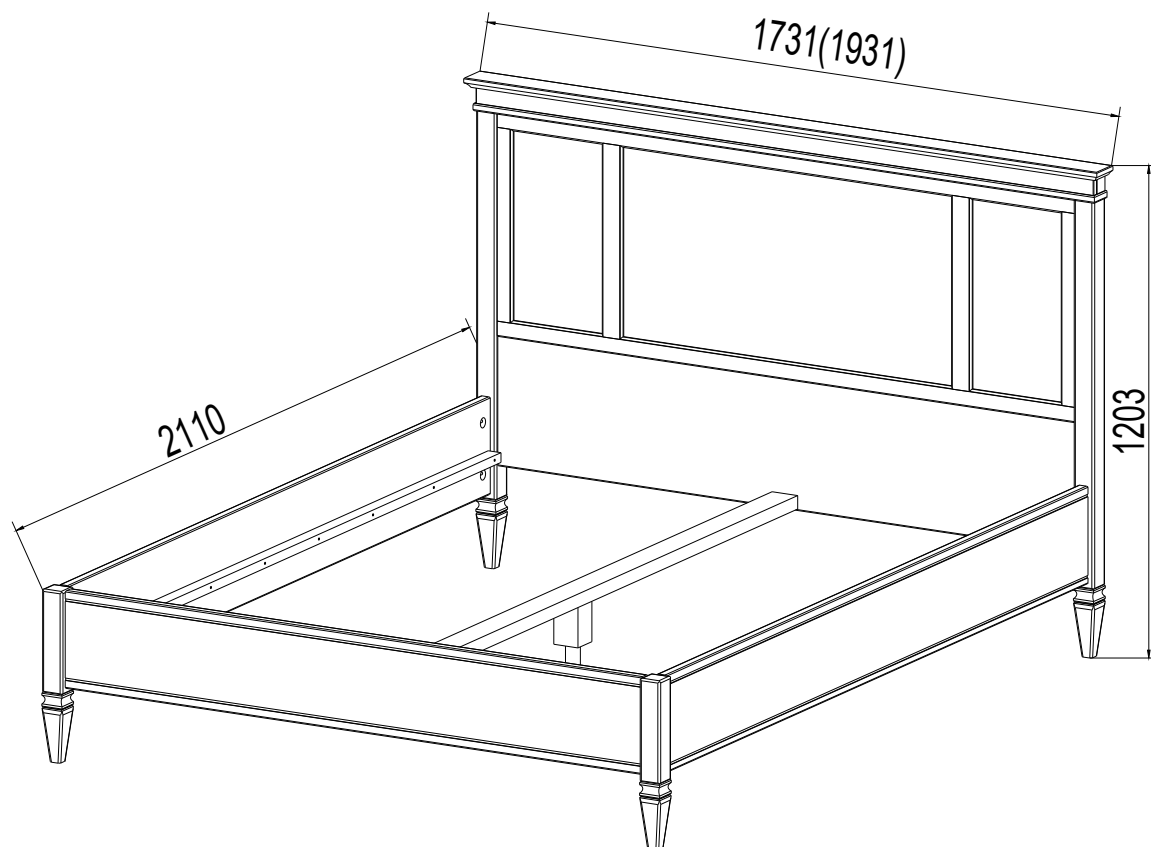

- | | | | |
|-----------|------------------------------------|-----------|--------------------------------|
| D | Montageanleitung | GB | Assembly instructions |
| FR | Notice de montage | IT | Istruzioni di montaggio |
| NL | Handleiding voor de montage | PL | Instrukcja montażu |
| CZ | Montážní návod | SK | Návod na montáž |
| HU | Szerelési útmutató | RO | Instrukțiuni de montaj |
| TR | Montaj talimatı | RU | Инструкция по монтажу |

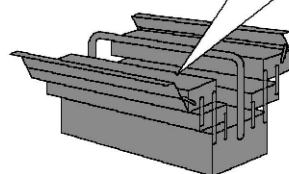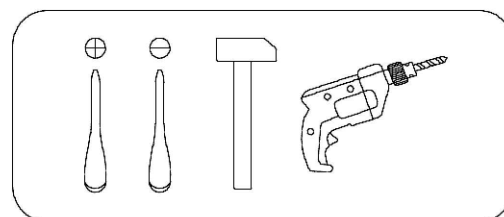


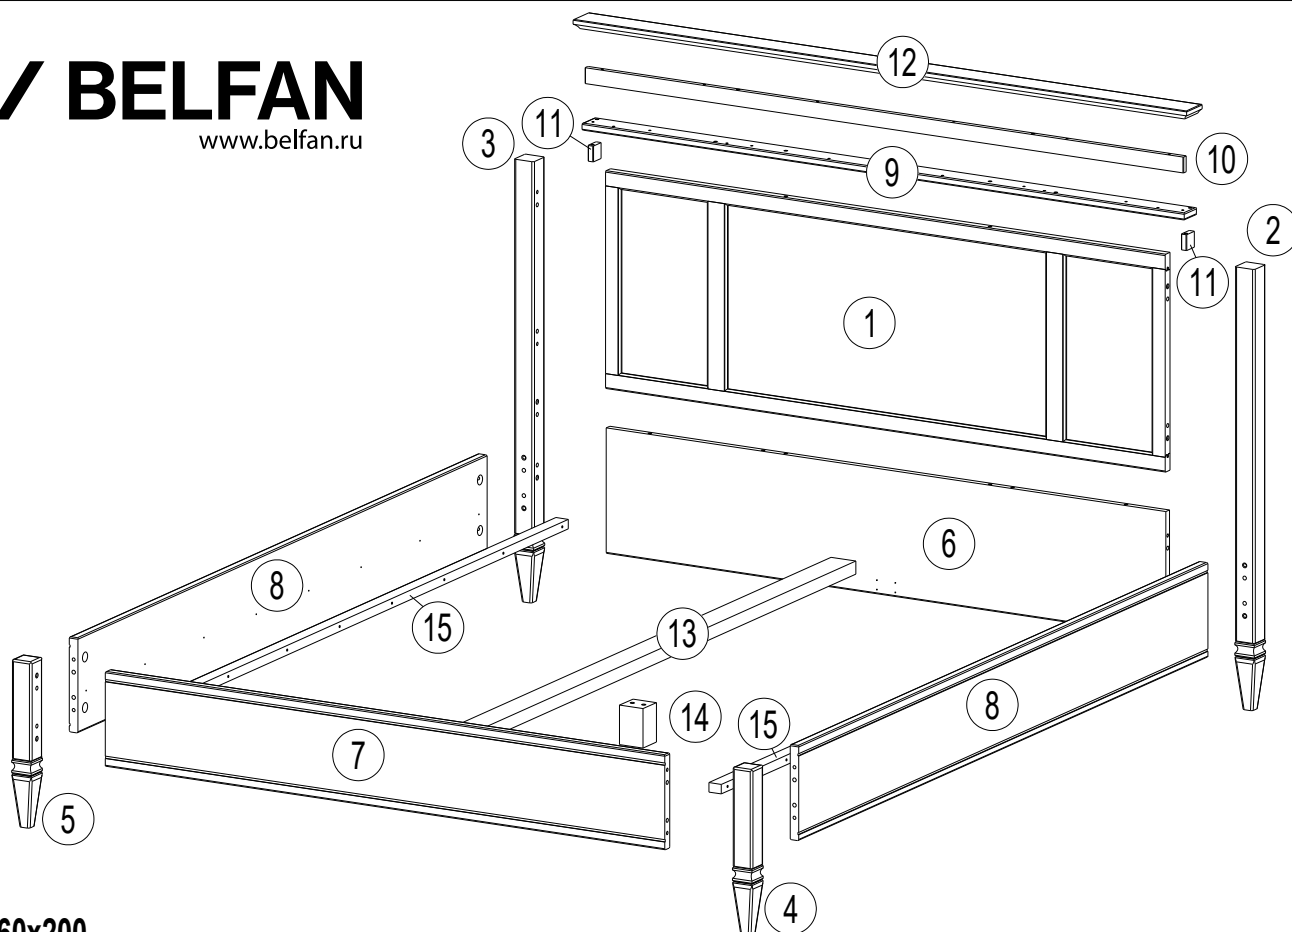


160x200


№	Size/MaB (mm)	Qty	✓	№	Size/MaB (mm)	Qty	✓
1	1579x551x24	1		9	1699x60x18	1	
2	1121x55x55	1		10	1689x40x15	1	
3	1121x55x55	1		11	40x40x15	2	
4	425x55x55	1		12	1731x76x24	1	
5	425x55x55	1		13	2008x70x33	1	
6	1579x318x18	1		14	100x66x66	1	
7	1579x240x24	1		15	1980x35x24	2	
8	2000x240x24	2					



180x200


№	Size/MaB (mm)	Qty	✓	№	Size/MaB (mm)	Qty	✓
1	1779x551x24	1		9	1899x60x18	1	
2	1121x55x55	1		10	1889x40x15	1	
3	1121x55x55	1		11	40x40x15	2	
4	425x55x55	1		12	1931x76x24	1	
5	425x55x55	1		13	2008x70x33	1	
6	1779x318x18	1		14	100x66x66	1	
7	1779x240x24	1		15	1980x35x24	2	
8	2000x240x24	2					

A 030093  x10	B 030110  15x11 x10	C 230010  8x32 x12	D 110024  SW 5 x1	E 250036  4x17 x16	F 070017  30x30 x4
G 030133  x20	H 030133  x20	I 250024  3,5x35 x13	J 180020  x2	K 180020  x2	L 230021  10x50 x22
M 250048  4x55 x16	N 170028  x1	O 070004  x1			

1



A 030093  x10	C 230010  8x32 x8	E 250036  4x17 x18	H 030133  x20	J 180020  x2
K 180020  x2	L 230021  10x50 x22	M 250048  4x55 x16	N 170028  x1	O 070004  x1

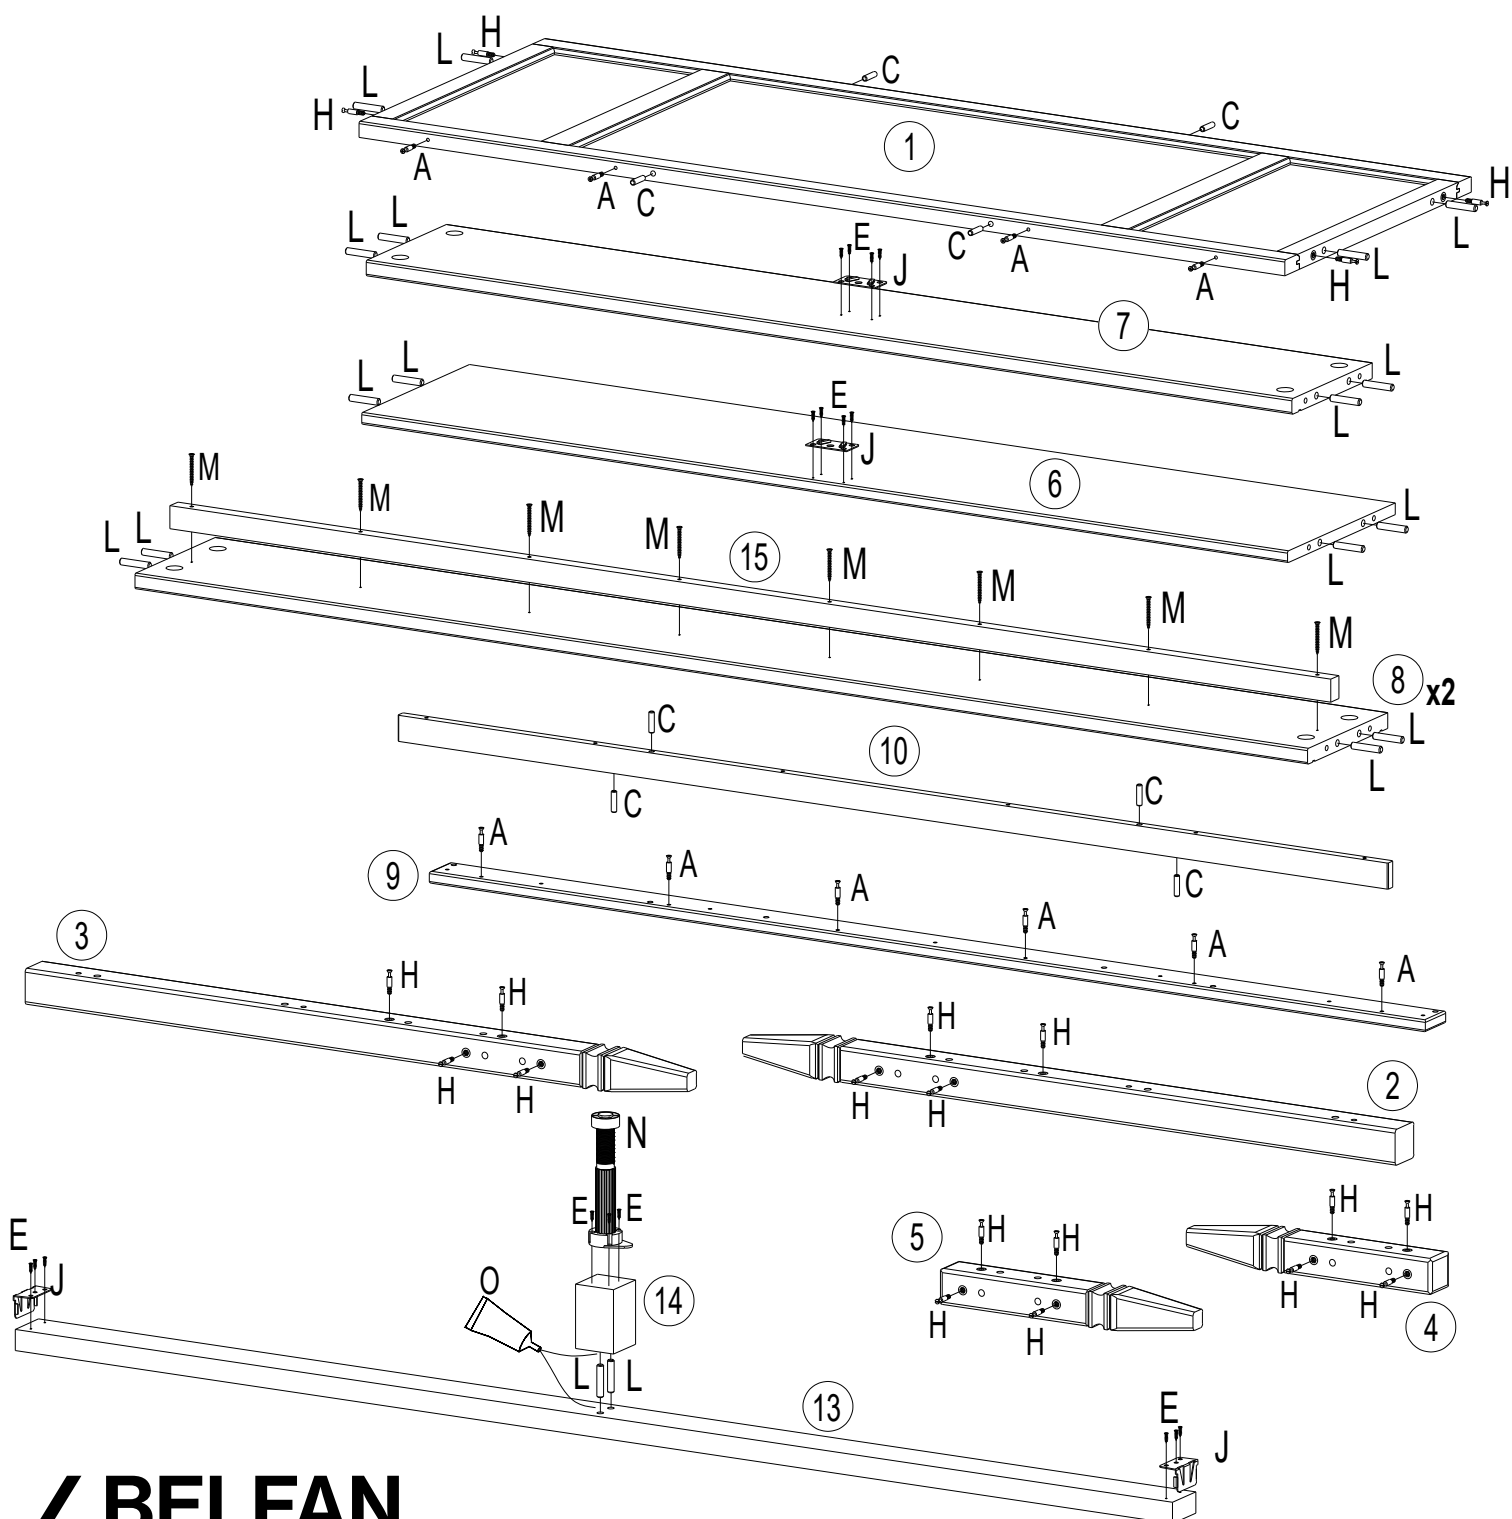

2

B

15x11



030110

x4


I

3,5x35




250024

x6

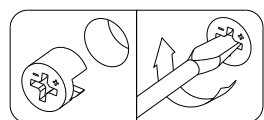

3

D



110024

SW 5

x1

F



070017

30x30

x4


G



030133


x12

/ BELFAN
www.belfan.ru

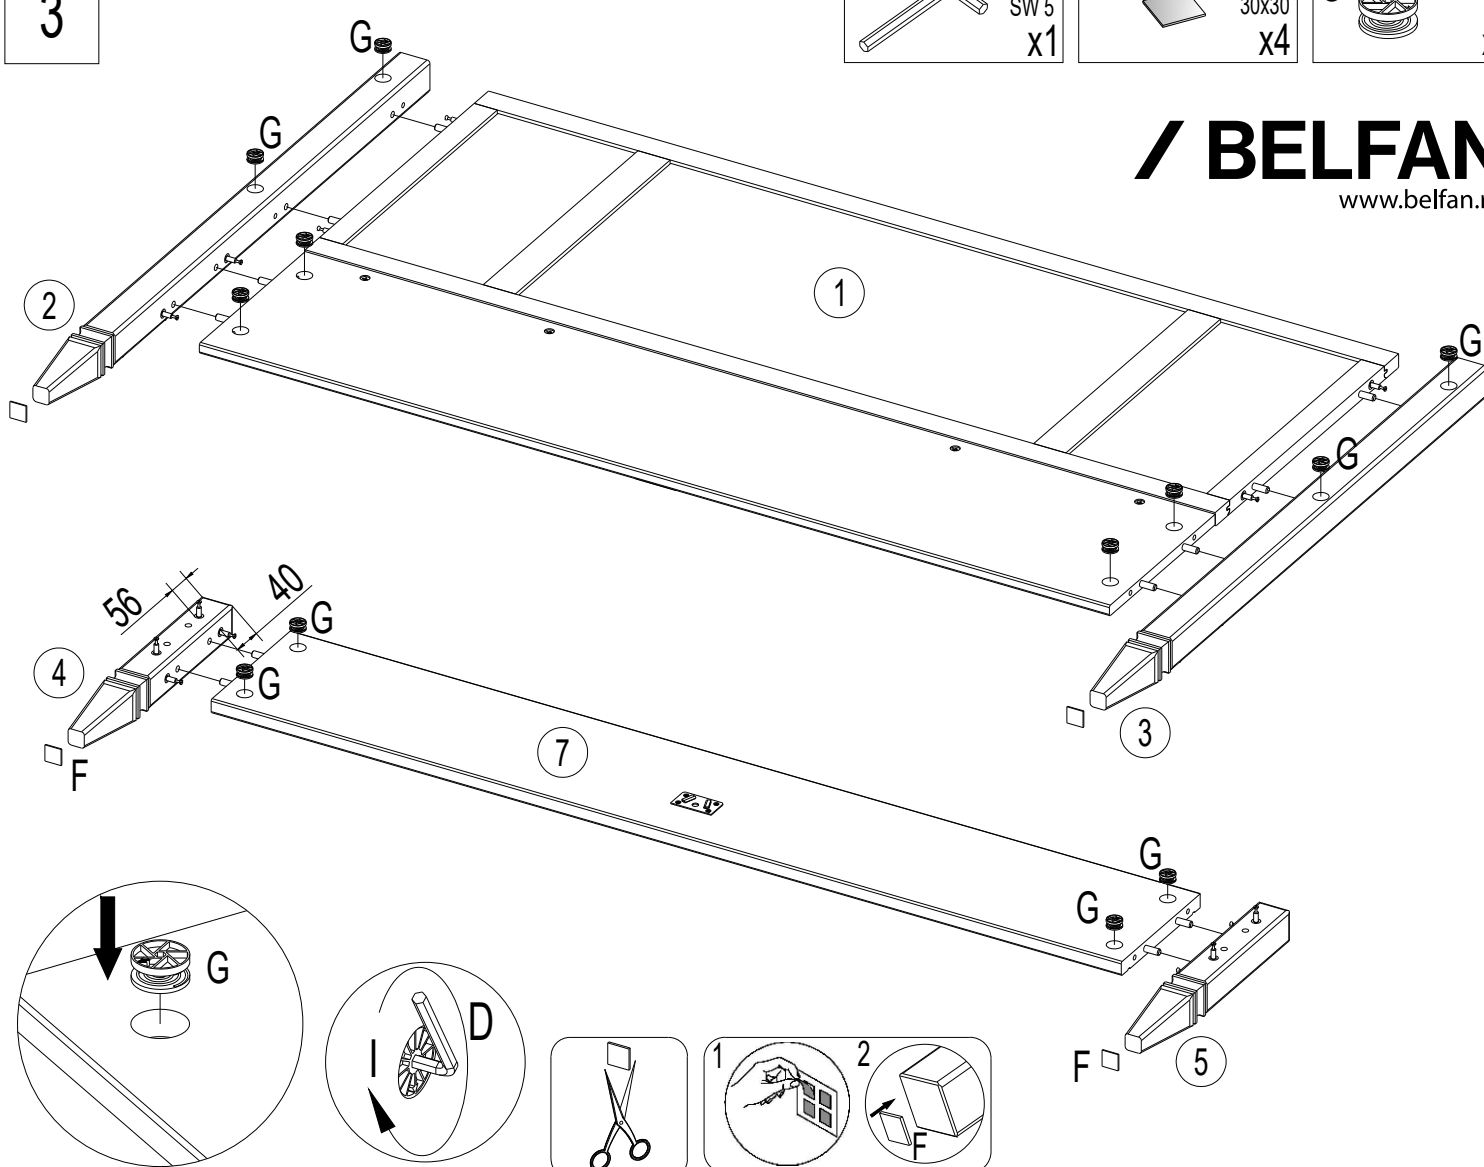


4-5

4

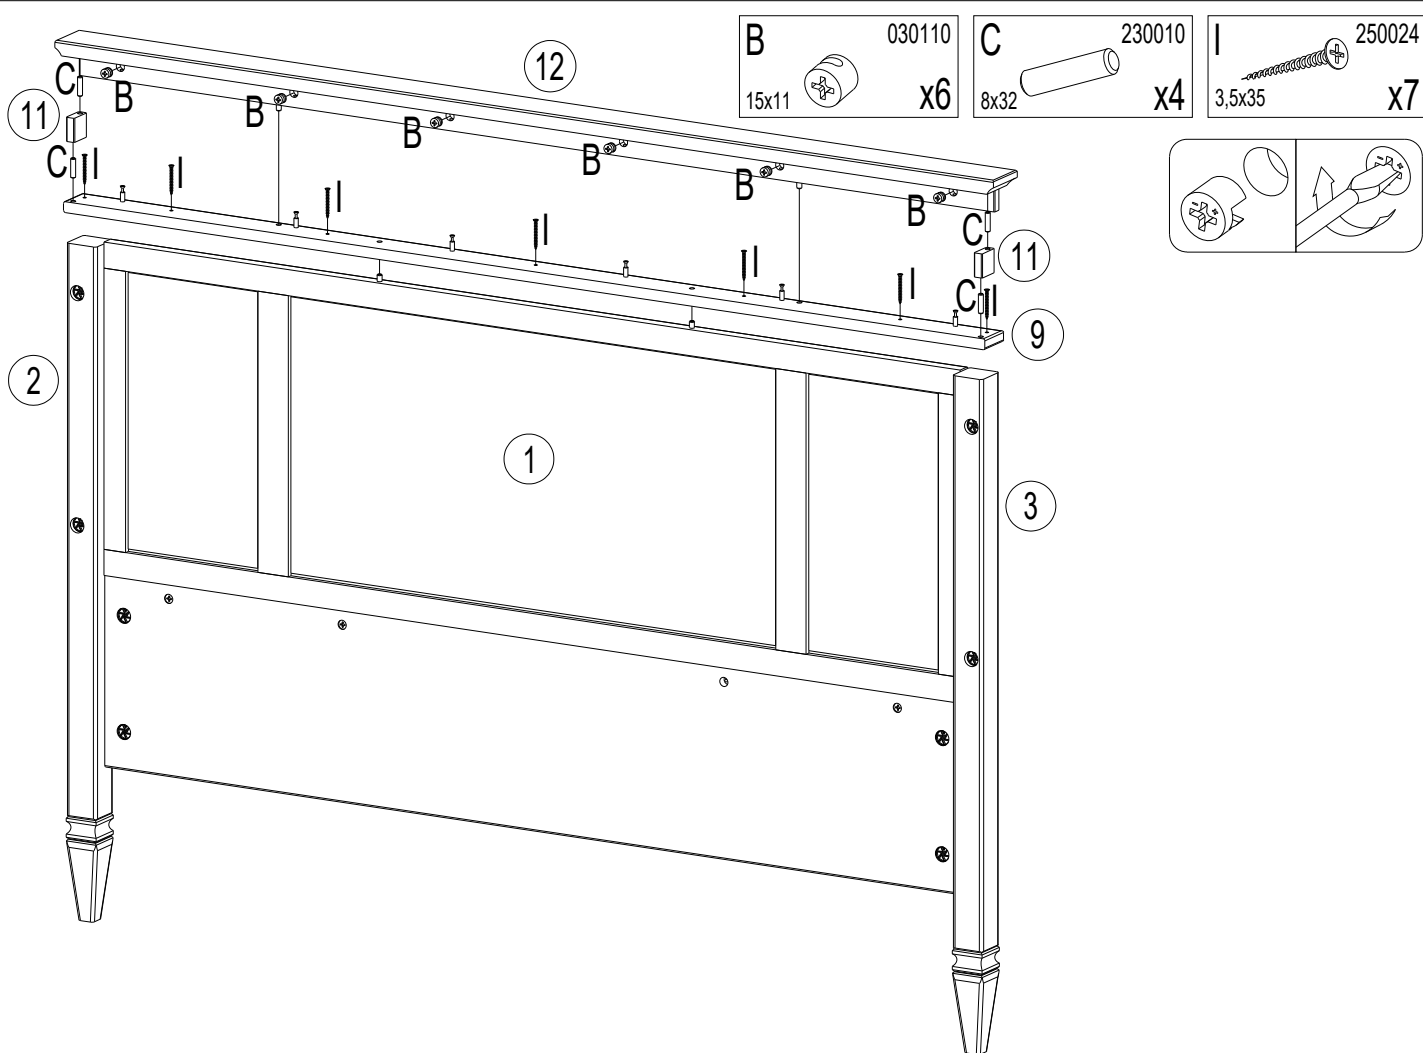

5

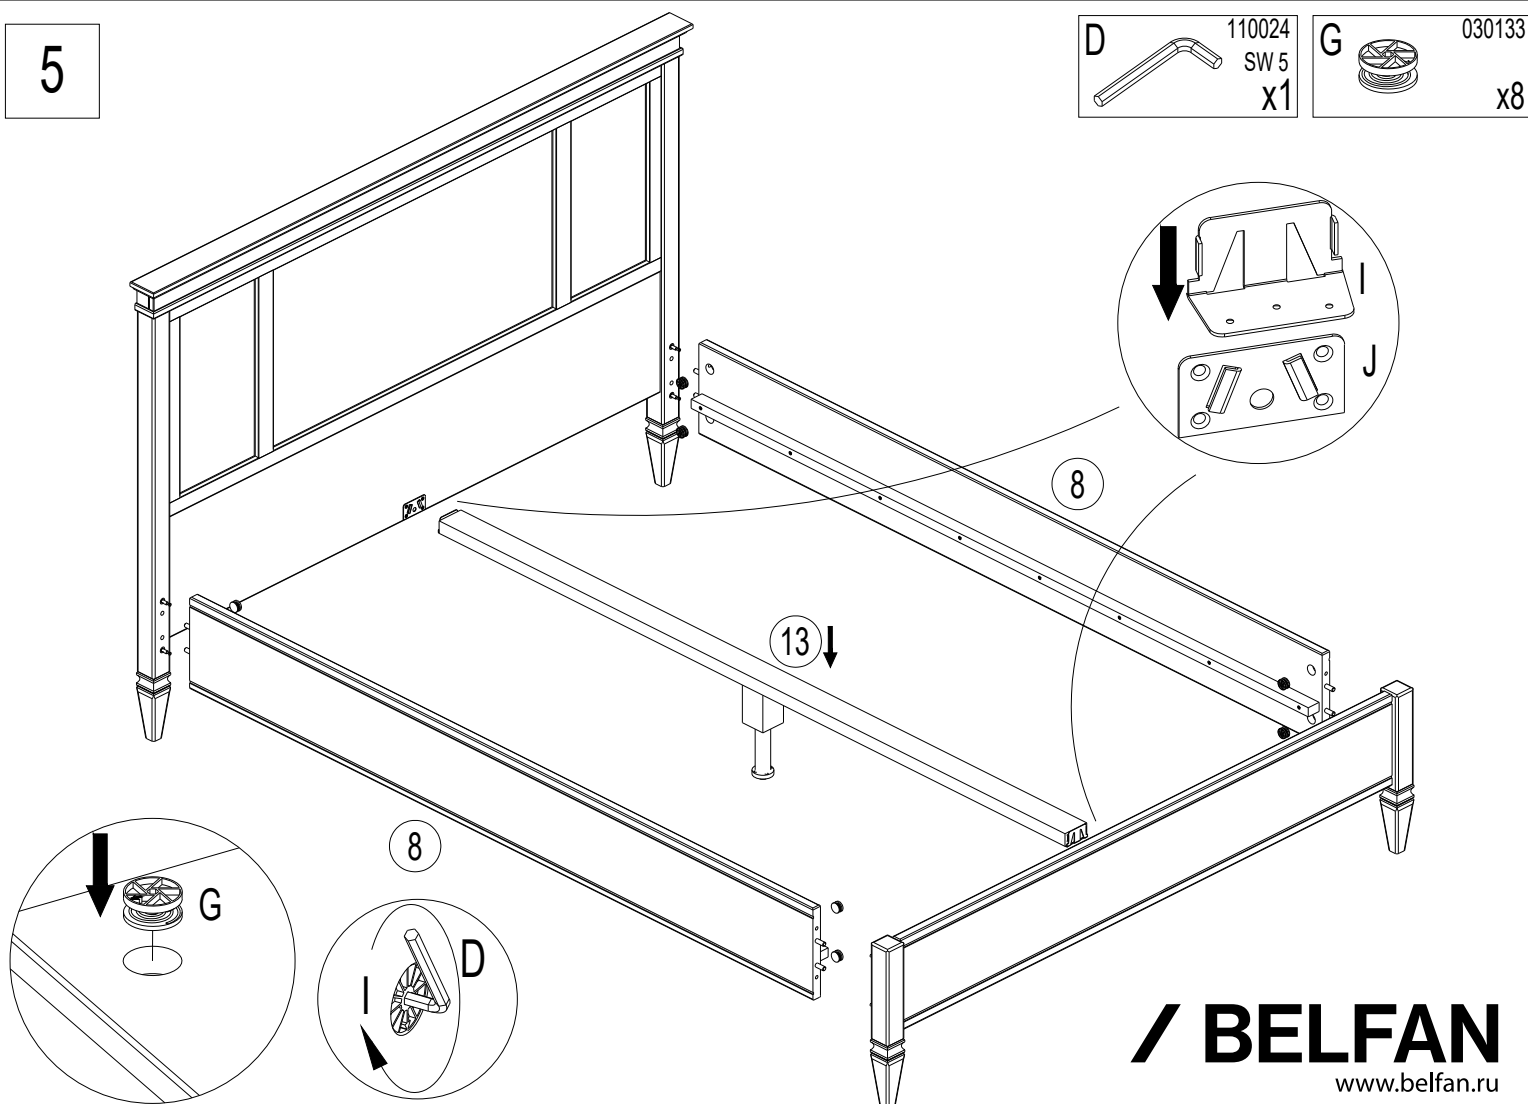

BELFAN
www.belfan.ru